Technical Specs

BETTABATHS

Vogue - Skirted Freestanding Bath

PRODUCT CODES

WHITE:	17CVOS01	VOGUE-1700-SKIRT WHITE
	17CVODI01	VOGUE-1700-DROP-IN WHITE

I FREESTANDING BATH I

BATH WIDTH:	790 mm
BATH HEIGHT:	580 mm
BATH LENGTH:	1700 mm
BATH VOLUME:	160 Lt
WASTE SIZE:	51 mm
OVERFLOW SIZE:	41 mm

AVAILABLE COLOURS:

WH

PROUDLY SOUTH AFRICAN

10 YEAR WARRANTY

SABS APPROVED

ECO Low carbon footprint

The 1700 Vogue skirted bath is a free-standing bath.

VOGUE FREESTANDING BATH INSTALLATION GUIDE:

Step 1: Tiling of bathroom
- Complete bathroom's tiling and grouting before installation to ensure a neat finish.

Step 2: Positioning of bath
- Two people are required whenever the bath needs to be moved. Never drag the bath along the floor as it will damage the feet. The bath must always be lifted and placed into position.
- Do not cut into the side of the bath. This will compromise the stability and warranty of the bath.

- Position the bath in its desired final position and trace its contours with a pencil.
- The waste pipe and trap should be installed by an accredited installer, and installation must comply with regulations.

Step 3: Connect the waste pipe
- Turn the bath on its side. Ensure that a rug is used to prevent the side or top of the bath becoming damaged.
- Connect the waste pipe to the p-trap. It is recommended to use a flexible bath connector (e.g. Jollyflex) to connect the waste pipe to the p-trap.
- Once connected, the bath can be placed onto the marked position.

Step 4: Levelling of the bath
- Ensure that the bath is level by using the spirit level.
- Adjust the feet until the required level is achieved.
- For wall-mounted models, attach the rim to the brackets

Step 5: Install fittings
- Do not cut or drill holes into the bath. This will compromise the stability and warranty of the product.

- Install all the taps and fittings.
- The Nicci Spout can be used as both an outlet and inlet.

Step 6: Sealing (skirted baths)
- Make sure the bath is flush with the floor for stability.
- Use silicone to seal the contours of the bath.
- Leave for 24 hours to set.

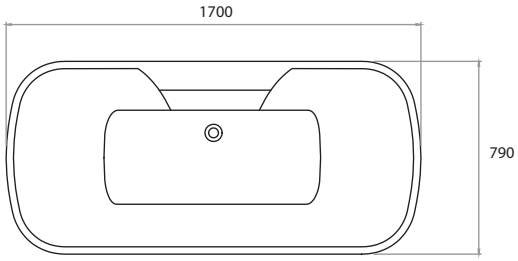

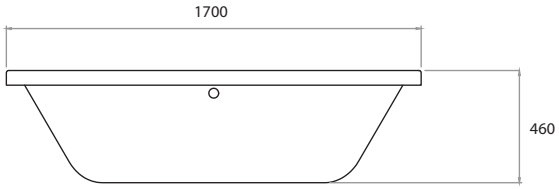

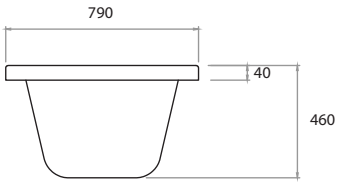

CERAMIC INDUSTRIES

Tiles & Bathroomware

Creators of style